


Calibrating Bi-metallic Stemmed Thermometers

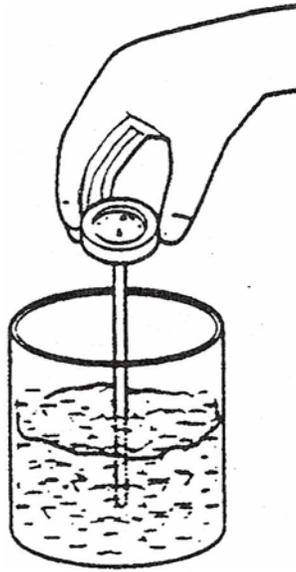

Procedure for ice point method:

1. Prepare a beaker with a 50/50 ice/water slush.
2. Insert thermometer into mixture, making sure that the dimple is submerged.
3. Let the thermometer stabilize.
4. Adjust calibration nut until indicator reads 32°F (0°C).

Erie County Department of Health
606 West Second Street
Erie, PA 16507
Telephone: 814/451-6700; Fax: 814/451-6775
www.ecdh.org